



Integrated Dash Cam

D31 & D32


User Manual

For 12v cars only

The device can be used with the official PC player and get more features.
Please download it from our website (<https://www.yeecore.biz/>).



Warnings

- In the accident, be sure to turn the power off and remove the SD card before storing it to avoid overwriting the recorded files.
-  · Please don't insert or remove the SD card while the power is on. Otherwise, this may cause damage to the SD card. Be sure to confirm that the power is turned off (power LED is off for at least 3 seconds) before inserting or removing the SD card.

MAX 18 MONTHS WARRANTY

Brand Guarantee

Extended Warranty

Warranty Time

12 Months + 6 Months = 18 Months

Scan the QR code and complete a simple product questionnaire to help us improve our product development.

And you will get a free 6-months warranty extension.

Link: <https://www.questionpro.com/t/AUY5NZqIBJ>

We'll inform you the warranty extension by email in 3 days.

[support@yeecore.biz]



How to contact the support team?

We offer a 12 Months warranty from the date of purchase.

If you meet problems or product defects, please contact us by email at support@yeecore.biz.

Please attach your ORDER ID and the details of your issues when you email us. We will solve the issues as soon as possible.

If you have any questions or issues, please do not hesitate to contact us. Your satisfaction is the most important thing to us.

Content

Note	1
Package Includes	2
Product Details	3
Installation	8
How to use App(Wi-Fi Connection)	14
Playback Video.....	18
PC Tool	22
Frequent Q&A.....	27
Specifications	29
Security Tips	30

Note

1. Please format Micro SD card on the camera before initial use, and choose the high speed brand card. (Class 10/U3 or above)

2. Make sure the power to the machine is off when inserting and removing the SD card.

3. Parking Mode must be activated with Smart Hardwire Kit. (Not include)

4. Use the car charger cable to connect the Type-C port of the Mount to car's cigarette lighter. Use the rear cable to connect the Type-C port of the front dash cam to rear camera. (Please Do Not Connect Wrong and Do Not Use The USB Cable as the dash cam's charger).

5. If the GPS on the app can't be displayed, please disconnect the WiFi first.

6. Please ensure that the lens and the front/rear glass is clean before use, otherwise it will affect the picture quality.

 
7. Don't disassemble or repair equipment and accessories except for maintenance personnel.

8. This camera uses a wide-angle lens, so it may produce distortion and shadows in a part of the image.
This is a characteristic of wide-angle lenses and is not unusual.


9. If the camera is not operated for up to 3 minutes, the screen will automatically turn off.

Note: It's not damaged or shut down.


Package Includes

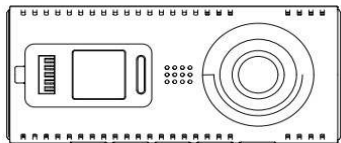


① USB Cable × 1

 


③ USB Cable × 1

 


⑥ Clip×6

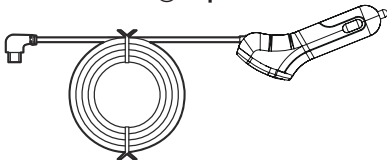 

 ⑧ Cigarette Charger Cable × 1
(Approx 11.5 ft)

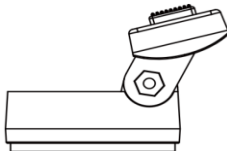


② Suction Mount × 1

 


④ D32 Rear camera with Cable × 1 (Optional)
(Approx 21.3 ft)



 ⑤ Crowbar × 1

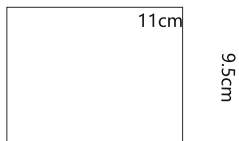

⑦ Electrostatic film × 1

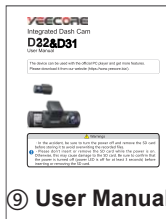 


⑨ User Manual

Product Details

■ Front Cam

 Front

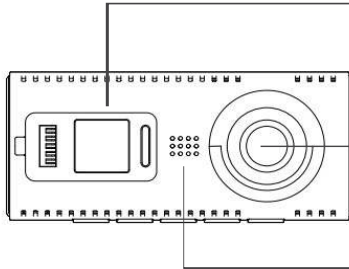


Connection Port
Connect with the mount.

Lens
A protective film is attached to the lens when you purchase it. Please remove it when you are the first time to use it.

Speaker
Where the sound of the recording file is output.

 
Back

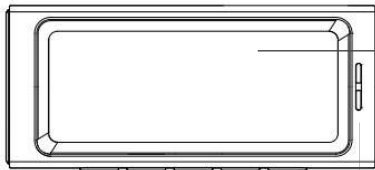

3.16-inch full-color LCD
Screen HD display of recorded videos.

Power LED (Red)
The Red LED indicates the operating status of the unit.

 
Right

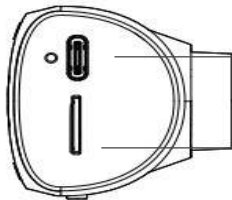

USB port(DC-5V)
Plug in cigarette charger cable or rear cable.


Micro SD insert Port
(The SD card is not included in the package)

 Top

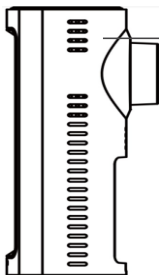

Microphone
Record sounds from the surround.

 MIC

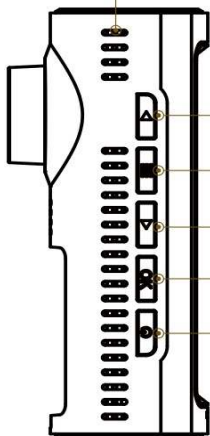

Button

UP

 
MODE

DOWN

OK

POWER

Left

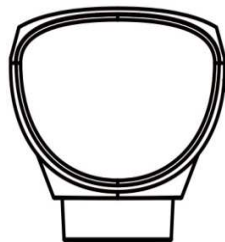

Optional Accessory

■ Hardwire Kit A21 (approx 16.5 ft)

By connecting the car battery directly from the vehicle's ACC line, the dash cam can be in powered without using the car's cigarette charger port in parking monitoring function.

※ The hardwire kit (A21) with 5V converter (buy extra ASIN B09DSK58MW) is necessary to activate the parking monitor.



YEECORE Link to A21

<https://www.yeecore.biz/products3/>

Remove/Insert the SD card

In this manual, "Micro SD card" is referred to as "SD card" unless otherwise noted.

※This dash cam supports micro SD card of 8 GB or more and 256 GB or less. (SD write speed U3 or higher)

Warnings

- After turning the power off, make sure that the power indicator LED (Red) is off for at least 3 seconds before the next process.
- ! • The SD card can only be inserted in one direction. Insert the SD card as shown in the figure below. Pushing the card in forcibly may damage the dash cam.
- Please ensure to format SD cards before using them in the dash cam.

1.Remove the SD Card

If the optional multi-battery or power supply unit with voltage monitoring function is connected, disconnect the power cord from the main unit first.

1-1 Turn off the car's engine.

After turning off the power, make sure that the power LED is off for at least 3 seconds.

1-2 Push the SD card in, let it pop out a little, then pull it out.



 
- ※ Please be careful not to lose the SD card when it pops out.
- ※ The SD card is so small that if dropped in the car, it may get into the space between the seats.

2. Install the SD card into the front cam.


2-1 Turn off the car's engine.

After turning off the power, make sure that the power LED is off for at least 3 seconds.

2-1 Insert the SD card.



 Push the card into the SD card slot until you hear a "click" sound.

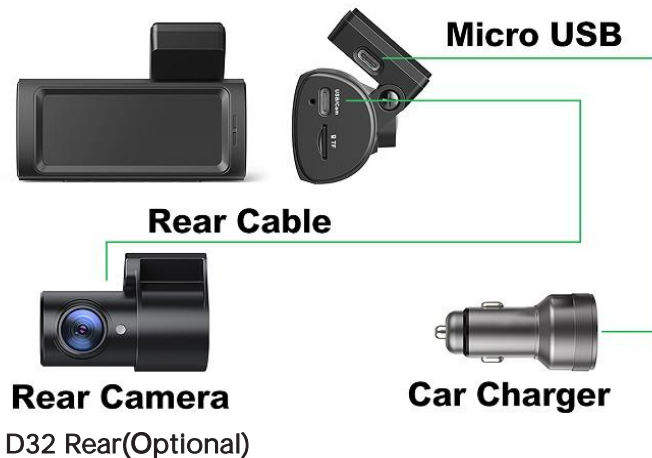

Installation

 
1. Determine the mounting position

1-1

Determine the position where the mount is attached to the windshield.

※Note: Please refer to the recommended mounting position for the main unit installation location.

●Location of the Front Cam

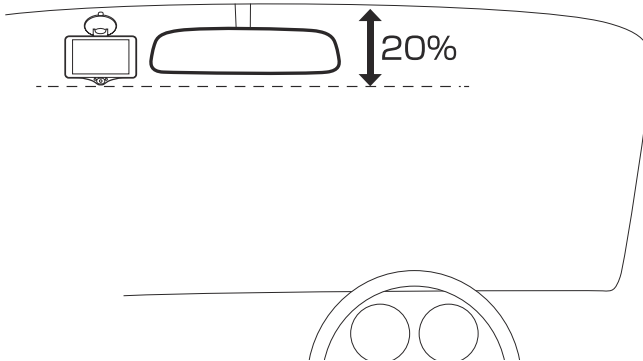

Different states have different laws regarding the installation of dash cams.

In general, a dash cam is considered an obstruction if it occupies more than 5 inches on the driver's side or 7 inches on the passenger's side. This can result in you being ticketed (or worse, having an accident).

2. Use the mount to predict the position of the front cam to be installed (Attach the electrostatic adhesive film)

2-1 Wipe the windshield clean. (To avoid that the video quality is affected by dirty)

Wipe the windshield clean of dirt and grease with a commercially available cleaning cloth.

※If there is dirt or dust on the windshield, or if the electrostatic adhesive film is repeatedly removed, the adsorption strength may decrease and the dash cam may fall while driving.

2-2 Tear of paper from the electrostatic film's adsorption sheet side.

2-3 Attach the electrostatic film to the windshield at the position where you decided to install the front cam.



3. Attach the front cam to the windshield

3-1 Combine the mount and the front cam.



3-2 Tear off the paper from the electrostatic film's another side.

3-3 Tear off the paper from the adhesive tape on the mount.

3-4 Attach the mount and front cam to the electrostatic film.

※ To strengthen the fixation, leave the mount for at least 24 hours after attaching it, and be careful not to pull or apply excessive force until the 3M adhesive tape is firmly attached.



- 3-5** Adjust the angle of mount so that the lens is level with the direction of vehicle travel.



4. Connect the front cam to the car

- 4-1** Connect the cigarette charger cable to the mount's Type-C port.



4-2

Plug the cigarette charger cable into the cigarette lighter port.

※Clean the cigarette lighter port.



4-3

Turn on the car, check the video, and adjust the angle.

After connecting the front cam to the car, turn on the car and adjust the mount's angle based on the video.

※When installing the front cam, adjust the angle so that the direction of the lens is horizontal to the direction of travel of the car.



Installation of Wire

1. Install the power cable

 
- ※ Hide the cigarette charger cable. (use a crowbar to hide the charger cable)
- ※ Use the crowbar to fix and hide the rear cable at the seam of the car, and use the wire clip to fix the rear cable the rear windshield.

1-1 Install the power cable

Please wire according to the overall wiring image shown in the image.

※If setting up the power cable is difficult, secure the cable with the clip.

●Overall wiring image

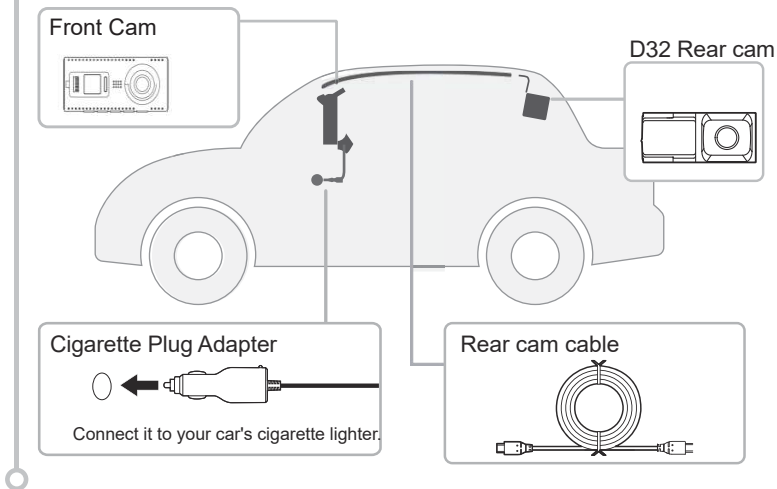

How to use App(wi-Fi Connection)

1.Download APP

Android



1. Open "Google Play"
2. Search for "YeecoreViewer".
3. Follow the instructions to install (free of charge).



Android QR Code

iPhone/iPad



1. Open the "App Store"
2. Search for "YeecoreViewer".
3. Follow the instructions to install (free of charge).



iPhone QR Code

 
Scan the QR code and you can view the APP use introduction video on Youtube.

Link:

<https://www.youtube.com/channel/UCSv0mkwjhL3LgOTu4Gr9MAg>

If you have any questions please contact us at first.

{support@yeecore.biz }

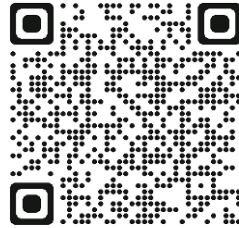

2. Connect your phone to the dash cam.

2-1 ▲ Long press and hold the up button



2-2

Wait a few seconds to check the Wi-Fi information.
SSID:YEECORE_342003572a19 PWA:12345678

 


Wait a few seconds.



2-3

Connect your phone to the dash cam.

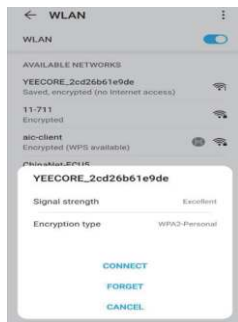

Turn on your phone's WLAN and Select the YEECORE WiFi.

Enter the password (PWA: 12345678) and connect the network.

3.APP

3-1 Open the YeecoreViewer App.



Click the YeecoreViewer

 


Launch the dedicated app.

4. App Introduction



Click "JOIN CAM".

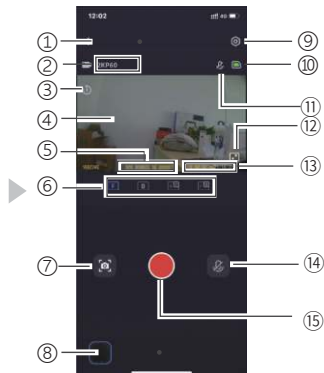


No	Item	Introduction
①	Back	Back to the previous window.
②	Resolution	Display the resolution
③	Recording time	Displays the recording time of the video.
④	Recording window	Displays the recording image.
⑤	Car License plate	Displays the car license plate.
	GPS	Display the latitude and longitude.
	Speed	Display the driving speed.
⑥	Front / Rear cam.	Press the button to switch the camera display. "Front" "-" "Rear" "-" "Dual screen (front/rear)" "-" "Dual screen (rear/front)"
⑦	Snapshot	Press the button to take a snapshot.
⑧	Video Playback	Press the button to the video selection window.
⑨	Settings	Press the button to display the setting window.
⑩	micro SD card	Displays the status of the SD card as an icon.
⑪	Audio recording	This is displayed when the audio recording in the recording settings is set to [OFF/ON].
⑫	Maximize display window	Maximize the recording image display window.
⑬	Date/Time	Display the real date and time.
⑭	Audio button	Press the button, you can turn on/off the audio recording.
⑮	Video button	Press the button, you can turn on/off the video recording.


Playback Video

1. Display video playback mode.

 1-1 Press the button to the video selection window.

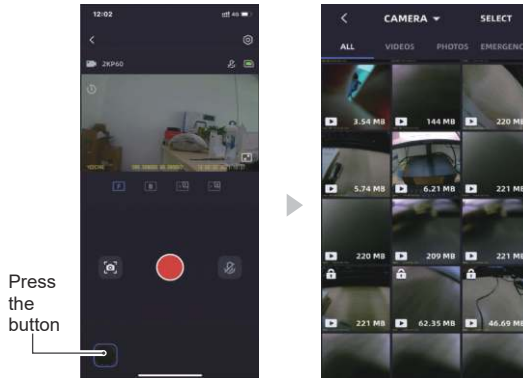

 1-2 Press the "Camera" button to switch between "Camera" and "Local".

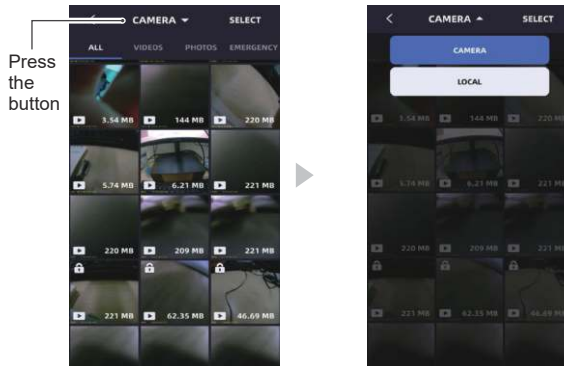

1-3

Click the "Select" button to select the file you want to "Download" or "Delete".



Reading Files

 
Videos and photos recorded by this dash cam can be handled by a computer in the same way as ordinary files. They can be playback and on computer that meets the following specifications.

OS: Microsoft Windows 7, 8, 10CPU: Core2Duo equivalent, 2.0GHz or higher
Memory: 2GB or higher

Recommended playback software: Windows Media Player (Windows standard)*1
YeeCorePlayer (official viewer software)*2

*1: For Windows 7, please use the latest version (12.0.XXX). (As of August 2018)

*2:Download the official viewer software: <https://www.yeecore.biz/Support/>

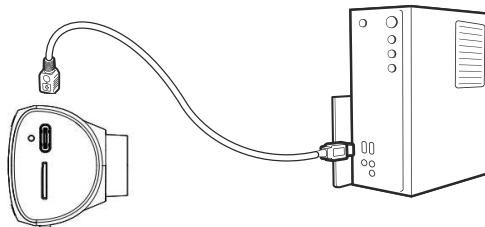

※ For the latest information on supported OS and operating environment, please check the website.

※ We can't guarantee this can work on all computers.

※ High resolution and FPS video may need high processing computer to play.

 
Depending on the computer environment you are using, the video may not play or work properly.

※ If the CPU or memory is less than the operating environment, playback may be slow.

※ If you use an SD card reader/writer that is not compatible with your SD card capacity, the files on the SD card may be corrupted.

1. Connect the dash cam to the PC.

1-1 Connect the dash cam to the PC.

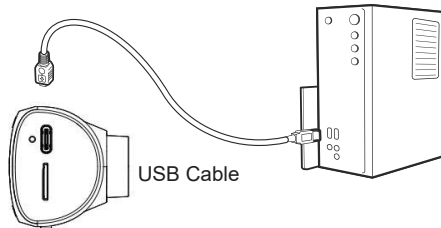

1-2 Open the SD card Folder and open the folder containing the file you want to play.

 
• Folder Name

Normal Video VIDEO Folder

Emergency Video.....EVENT Folder

Snapshot..... PHOTO Folder

1-3 Double-Click the file

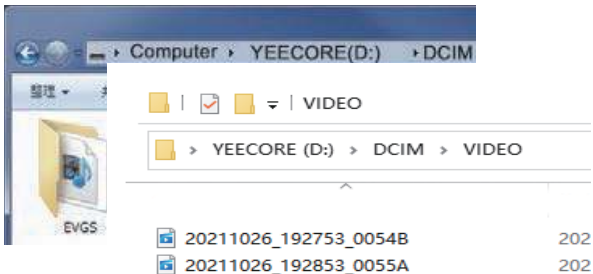

You can play it with the Windows Media Player.

PC Tool

1. Preparing

Please download the official player software from our website and install it.

※ Please refer to our website for installation instructions:

<https://www.yecore.biz/Support/>

※ If you accidentally delete the viewer software, or if it no longer works properly due to an OS or system update, please download the latest version of the player software from our website.

2. Turn on the official player

 
2-1 Click the [YecorePlayer] icon on the desktop.



The YecorePlayer will start.


3. Playing Record ed Files

3-1 Connect the dash cam to the computer

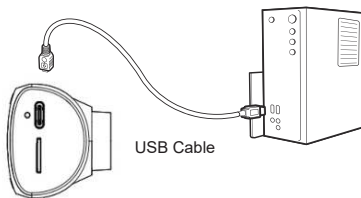


3-2

 Click the Icon

**3-3**

 Select the connected SD card, and then click [OK].

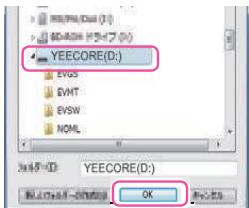


- Folder Name
- Normal Video.....VIDEO Folder
- Emergency Video.....EVENT Folder
- Snapshot.....PHOTO Folder

- ※ When you select an SD card, all the data will be loaded and displayed in the dedicated viewer software as one group of files from the start of recording to the end of recording.
- ※ If you select one folder, only the data in this folder will be loaded.


3-4

 Double click the video

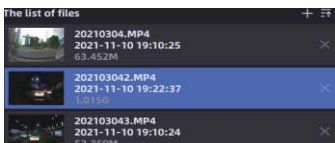

The video will be played.

 4. Turn off the player

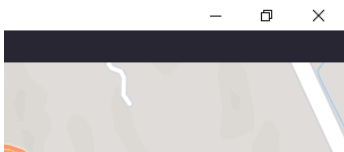4-1Find this close icon  in the top right corner of the player

The player will close.

Official Video Player

With the Official Video Player, you can play back videos and display your vehicle's position, route, speed and time.

※ Please refer to our website for installation instructions:

<https://www.yeecore.biz/Support/download.php?class2=120>

※ Internet connection is required to display the vehicle's GPS information.

1. The YeecorePlayer Introduction



No	Item	Introduction
①	File	Add Files: When the "Open File" window opens, select the folder you want to load. Save as: The "Save As" window will open and save the file with a new name.
	Settings	You can set the "Language", "Speed Unit", "Play Mode", and "File Path".
	About	You can find more information about YeecoreViewer.

No	Item	Introduction
②	Video display	Video display window
③	Video Time	The duration of the past video
	Next	Play next video
	Play/stop	Play/stop the video.
	Previous	Replay previous video
	Video Duration	the total video duration.
④	GPS	Displays the latitude and longitude.
	Speed	Display the driving speed.
	Recording time	Displays the recording time of the video.
⑤	Timeline	It can be played from the clicked position.
⑥	screens cutover	Switch 1/2-screens play mode
	Snapshot	Press the button to take a snapshot.
	Video settings	Set the video.
⑦	Driving Speed	Display the driving speed in a board.
⑧	The fastest Speed	Display the fastest driving speed.
	Average speed	Display the average driving speed.
⑨	G-sensor Sheet	Displays the G-sensor data embedded in the video file in graphs on X, Y, and Z axes.
⑩	Icon	Minimize: Minimize the window
		Maximize: Maximize the window
		Close: Close the player

No	Item	Introduction
⑪	Map Display Window	The loaded video is linked to OpenStreetMap and your vehicle's position will move. If you are not connected to the Internet, the map (OpenStreet Map) will not be displayed.
⑫	Playback speed	You can change the playback speed.
	Enlarge the video	Enlarge the video window.
	Adjusting the volume	You can adjust the volume of the playback audio.
⑬	Display window	Press the button to switch between full-screen and in-player display of the video.
	Playlist order	Sort the order of the videos in the playlist.
⑭	Add files	When the "Open File" window opens, select the folder you want to load.
⑮	Document List	Displays detailed information about the recorded file. When selecting a file, the background is highlighted (blue). Double-click the selected file to play it.

Frequent Q&A

I can't record any video.

■ Is the SD card inserted correctly?

When the SD card is not inserted or there is an error, or "Please insert SD card" is displayed.

When the SD card is abnormal, video cannot be recorded. Please format the SD card in this unit.


If the message appears frequently, replace it with a new SD card.



■ Is the SD card full of protected files?

Protected files cannot be overwritten. You can delete all recorded files by unprotecting or formatting the SD card.

You can delete all recorded files by unprotecting or formatting the SD card.

Protected files are indicated with an icon on the  file selection screen.



Emergency video is not exist

■ Was the impact at the time of the accident weak?

If the collision at the accident is weak, the G-sensor may not be able to detect the collision. In this case, please check the video of the normal video.

There are spots or bright spots on the monitor screen

■ This is a phenomenon of the LCD panel, not a malfunction.

Some of the effective pixels may be missing or constantly lit.

The screen does not appear

■ Press any of the buttons.

The dash cam can turn on the screen display by pressing any of the buttons.

It is difficult for this product to acquire GPS information

- GPS reception signal will be affected.
Some car navigation GPS antennas may affect the GPS reception of this product. Install the product as far away from the antenna as possible.

It is difficult for this product to acquire GPS information

- GPS reception signal will be affected.
Some car navigation GPS antennas may affect the GPS reception of this product. Install the product as far away from the antenna as possible.

When recording indoors, the video had horizontal stripes

- Set the flicker to 50Hz or 60Hz according to the power frequency of the region, which varies from region to region.

Circulation recording did not work or recording was interrupted

- The SD card may be a low-speed card.
Use a U3 or higher speed SD card.
- If you use the SD card for a long time, the speed will slow down.
It is recommended to format it with the camera.

"File error" was displayed when playing video or photo files

- This is the reason why the writing speed of the SD card is slow.
This is why SD card write speed is slow and some video and photo files may be abnormal. It is recommended that you format the SD card in your camera.

Unable to read SD cards larger than 64G

- The SD card is not formatted.
It must be formatted with 32 KB FAT32 file system on the computer or Formatted with this product.

Specifications

Voltage	DC5V
Power Rating	5W
Pixels	5M pixels
FOV	Front: 140° Rear: 130° (Rear is optional)
Screen	3.16 inch full color LCD
USB port	Type-C
Video duration	1 min/2 min/3 min
Storage	Micro SD card: not include
Format	MP4(Video)/JPG(Photo)
FPS	30 frame per second
Temperature range	-14°F ~ 158°F
Wi-Fi	Built-in 2.4G
GPS	Built-in
Audio	Built-in microphone/speaker
G-Sensor	Built-in

※ 1: The recorded view differs depending on the resolution.

Due to the ultra-wide angle of the lens, the ratio of the horizontal, vertical and diagonal viewing angles will vary.

- The various names, company names, product names, etc., mentioned in this manual are trademarks or registered trademarks of the respective companies.

The TM and ® marks are not specified in the text.

List of SD cards supported


Storage	micro SD card
Memory	8 ~ 256GB
Writing Speed	Above U3

※ The writing speed class is a speed standard for continuous writing.

Security Tips

Please observe the following safety precautions


Warning


 Stop using the product immediately if there are the following abnormalities:


- Foreign into inside
- Immersed in water
- Smoking internal
- Strange smell


Otherwise, it may occur in fire or electrocuted.

Please stop using the product, cut down the power and contact the support team.


 If you have a medical device, such as a pacemaker, check with the manufacturer of the medical electrical device or your doctor for information on the effects of the medical device.


 If you have a significant medical history, or are pregnant consult your doctor before using the device.


 If the device is not to be used for an extended period of time, disconnect the power cord from the device. Failure to do so may result in a discharged car battery and fire hazard.

-  Don't attempt to disassemble or repair the device or its accessories unless servicing is carried out by profession personnel. Non-compliance action may result in electric shock or malfunction. Leave all internal checks, adjustments and repairs to your dealer.



-  Please avoid putting the device in the following places:
Direct sunlight;
Heaters;
High humidity, dust or fumes.

-  Do not place or heat the device in a fire, microwave oven, or high-pressure container. This may cause the appliance to burst, catch fire or cause burns.

-  Do not insert pins, wires or other metal objects into holes or crevices.

Don't do it!
It may result in electric shock or malfunction.



⊘ Don't use this product in places where its use is prohibited, such as hospitals and on aircraft.

This may result in the failure of electronic equipment or other components and cause serious accidents.

⊘ Don't use the unit in environments with high levels of flammable gases.
It may result in an explosion or fire.

⚠ Please keep the SD card and other accessories out of the reach of children to prevent accidental ingestion.

⚠ Warning

⊘ Don't continue to use the unit with condensation on the surface, as this may cause malfunction or heat generation. (Condensation may form on the unit when it is moved from a cooler to a warmer environment.)

⊘ Don't drop the product or subject it to strong shocks as this may lead to damage or failure.

⊘ Please handle with care to prevent foreign objects from entering the terminals. Foreign objects may result in malfunction.

⊘ Don't operate the unit when hands are wet. It may cause electric shock.

 


⊘ Don't place magnets or other magnetic materials near the device. This may cause malfunction.

⚠ This device is a precision instrument. Due to static electricity or electrical noise, the program and hardware may be damaged. If the software or hardware are damaged, the unit will not operate.

⚠ Warning

- ! Attention: Different states have different laws regarding the installation of dash cams. In general, a dash cam is considered an obstruction if it occupies more than 5 inches on the driver's side or 7 inches on the passenger's side. This can result in you being ticketed (or worse, having an accident)

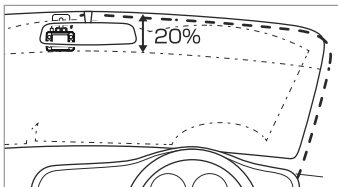


- ! Install the device in a location where it will not interfere with driving or visibility, and where it will not interfere with the car's functions (brakes, steering wheel, etc.).

Wrong installation may result in a traffic accident.

- ! Don't install or wire the device near the airbag.

In the accident, the airbag may blow up and cause an accident or injury.

 In addition, the cord may obstruct airbag function.

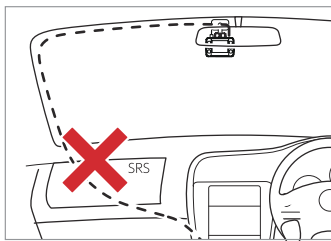

⚠ Warning

- ! Please pay attention to your own safety during installation; please check the product regularly. Otherwise, injuries, accidents or property damage due to falling or dropping of the product may occur. Please note the prominent part of the product.

- ! Please avoid being hurt by the protruding part when installing and using.

- ! Make sure the plug is fully inserted into the port.

Failure to do so may result in fire, electric shock or malfunction.

⚠ Warning

! If your vehicle is equipped with a continuous power supply cigarette lighter outlet that provides a supply of energy even when the engine is turned off, unplug the cigarette lighter.

⊘ When unplugging the cigarette plug cord, do not pull the power cord. This could damage the cord and cause an electric shock or short circuit, which could result in a fire. Always unplug the cord without holding it.



● Micro SD Card

⚠ Warning

⚠ Before inserting or removing the SD card, please make sure the dash cam is turned off.



⚠ SD cards can only be inserted from one direction. Make sure the card is inserted in the correct direction before inserting it. Forcing the card in without following the correct orientation may result in damage to the device.

● Operation and maintenance of the dash cam

- ! Please don't operate or look at the screen while you are driving.
- ! In some states, it is illegal to operate the dash cam while driving.

- ⊘ Prohibit the driver from operating the dash cam while driving.
- ⊘ Operating the dash cam as the vehicle is on may result in accidents due to inattention to the road. Please stop at a safe place and pull the side brake in advance, and then operate the dash cam.

Precautions for Use

- We are not responsible for any personal violations. Please keep driving safely.
- We are not responsible for any incidental damage to the vehicle or on-board equipment due to the incorrect installation of dash cam.

- We are not responsible for any damage caused by natural disasters, fire, other accidents, intentional or negligent acts of the customer, or modification of the product.
- In no event shall the Company be liable for any damages resulting from failure to observe the instructions and other compliance requirements described in this manual.
- The specifications, appearance, icons, display names, and contents of the display of this product are subject to change without notice for the purpose of improvement.
- We are not responsible for any discoloration or deformation of the vehicle caused by the installation of this product.

■ Precautions for Cigar Plug Cord

- Please use the supplied cigarette plug cable only.
- If the fuse inside the cable, replace it with a new commercially available fuse (2A). If the fuse blows immediately after replacement, stop using the product immediately and contact your dealer or Customer Service Center for repair.
- When replacing the fuse, be careful not to lose any parts.
- If the fuse is blown immediately, stop using the product immediately and ask your dealer or our customer service center to repair it.

■ Precautions for LCD panel

- Don't press down hard on the screen or operate it with sharp objects such as nails or pens.
- Don't rub or scratch the screen with metal or other objects.
- When the temperature is extremely high, the screen may turn black. This is a characteristic of the LCD screen and is not a malfunction.
- The LCD screen is made with very high-precision technology and has more than 99.99% effective pixels, but there may be 0.01% missing pixels or pixels that light up constantly. Please be forewarned.
- When recording high-luminance images such as the sun, the image may appear as a black dot, but this is not a malfunction.

■ Precautions for GPS

- When using this unit for the first time, it may take more than 2 minutes for completing GPS positioning.
- If the windshield is tinted with metallic film or glass with low radio wave transmission (such as insulating glass with metal coating), GPS positioning may not be possible.
- The display of driving speed, driving route, distance, etc. is measured only by GPS signals and may vary depending on the positioning conditions.

■ Filmed Images

Since this camera uses a wide-angle lens, some of the images may be distorted or shaded. This is a characteristic of the wide angle lens and is not an abnormality.

■ Precautions for SD card

- Please use an SD card reader that matches the capacity of the SD card you are using. If you use an SD card reader that doesn't support the capacity of your SD card, you may not be able to read or write to it and occur in data corruption.
- Be sure to insert/remove the SD card while the power is off. If the SD card is removed or inserted while the unit is operating, the SD card may be damaged, data may be lost, or other malfunctions may occur.
- The SD card consists of a NAND flash memory and a controller, and may have defective sectors.

■ Precautions for Installation

- Install this unit correctly according to the instruction manual.
- Don't install products with GPS functions or VICS receivers near this unit. It may cause malfunction.
- Don't place other objects around the unit, as they may be reflected in the image.
Don't use accessories other than those listed in this manual or sold separately. We are not responsible for the operation of the product when other accessories are used.

■ Precautions for Recording

- The dash cam records images continuously, but does not guarantee that images quality will be recorded in all situations.
- This dash cam is not guaranteed to be effective as evidence of an accident.
- In the event of a malfunction of the cam, or damage caused by the use of the camera, or loss, damage, or destruction of recorded images or data, the company assumes no responsibility whatsoever. Please do not drive dangerously, such as

However, when data is repeatedly recorded, the location of the bad sectors cannot be determined and the apparent recordable area decreases.

However, if data is repeatedly recorded, the location of bad sectors cannot be determined and the apparent storage space decreases.

- It is recommended that you replace the SD card with a new one periodically. If the SD card is used for a long period of time, it may not be able to record properly due to numerous bad sectors, or it may become unusable due to an SD card error.
- If you use the camera for a long period of time, it may not be able to record properly due to a number of bad sectors, etc., or it may become unusable due to SD card errors.

If you have any questions, please contact us.

If you lose data while using this product, we will not be responsible for any warranty of the data.

Don't store any data other than that of the camera in the SD card. Don't put any data other than that of the device into the SD card. This may cause unstable operation.

■ Precautions for summer

When using a sunshade or other shade, don't place the dash cam between the windshield and the sunshade or other shade.

Doing so may cause the dash cam to malfunction due to heat buildup.

braking suddenly to check the operation of this unit.

- In order to record images properly, always keep the camera lens and the windshield of the vehicle clean.
- The number of frames recorded may vary depending on the recording conditions.
- Don't look at the power indicator or operate the camera while the vehicle is in motion.
- When using one-touch recording (manual recording), be sure to check the surrounding area for safety before operating the camera quickly.
- In the event of an accident, be sure to store the SD card to prevent the recording file from being overwritten.
- This unit is composed of precision electronic parts, and the following handling may damage the data.

■ Precautions for Combination

- Please note that we can't guarantee the operation of the product in combination with another company's product, as we have not verified the operation. Please be aware of this in advance.

■ Precautions for Warranty

- This dash cam is covered by a one-year warranty from the date of purchase. (This dash cam comes with a one-year warranty.)

Warranty

1. During the warranty period (one year from the date of purchase), the product will be repaired free of charge if it should fail under normal use.

If you wish to have the product repaired during the warranty period, please take the product and the warranty card to your dealer for repair.

3. In the following cases, the product cannot be repaired free of charge even within the warranty period.

- (1) If the product has been tampered with, or if it has been repaired by anyone other than our designated service store.
 - (2) Failure or damage caused by transportation, moving, dropping, etc. after purchase.
 - (3) If the product is judged by our company to have malfunctioned due to improper use or storage by the customer.
 - (4) If the product has been tampered with or disassembled.
 - (5) Ageing, friction
-

Support Service

If you have any issues with the product during the warranty period, please contact us through Amazon's "Order History" -> "Contact Seller" and we will resolve the problem as soon as possible.

How to contact us with email.

We provide 12 Months warranty from the date of purchase. If you have any issues, please contact us by sending an email to "support@yeecore.biz".

Please include your order number and the details of your inquiry when you send it to us. We will solve the problem as soon as possible. Your satisfaction is the most important thing to us.


Warranty

Warranty Period	12 months from purchase
Product name	Dash Cam D32&D31
Purchase Date	Year Month Date
Customer	Your name: Phone Number: Address: Store Name:
Issue information log	

Made in China

Customer Service

 If you have any problems about functions or installation, Please kindly contact us in time so we can provide the best customer service to you.

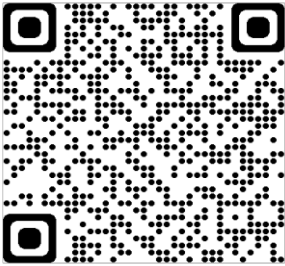

[facebook.com/yeecoreworld](https://www.facebook.com/yeecoreworld)



WhatsApp



Installation of Dash Cam



This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Made in China